



User Manual

TPMS Reset Tool

Enter Learning Mode

- 1. Make the gear in P position.
- 2. Ignition switch to OFF, press and release the brake pedal.
- 3. Turn ignition switch from OFF position to RUN position 3 times and end at RUN position.
- 4. Depress and release the brake pedal.
- 5. Ignition to OFF position.
- Ignition goes from OFF position to RUN positiontimes and ends at RUN position.
- 7. Horn will ring once and TPMS indicator flashes, then learning mode has been entered successfully. If equipped, the message center will display the front left (LF) tire.





To Rest TPMS Sensors


- 1.Starting relearn process from left front tire, point antenna on correct position. Press & release power button. Once the speaker chirped, move to the next tire.
- 2.Follow this order to rest TPMS sensors: Front left, front right, rear right, rear left.
- 3.After all sensors reseted, the car horns twice means TPMS re-learn finished.



Tips for user:

1.Please make sure antenna fit in CORRECT position.

2.Please make sure the 9V battery is with enough power.

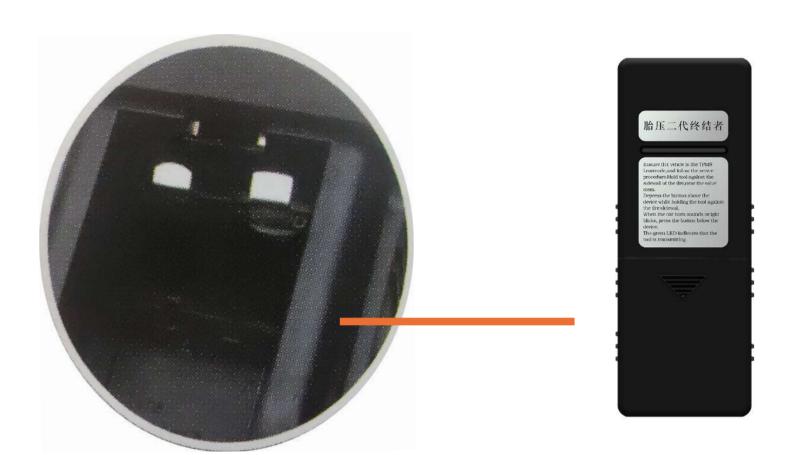

Note: Battery not included

3. Sensors should be original OEM sensors which well programmed.

